



Resetting Oven Door Hinges / Reinstalling Oven Door For PSGR Models

If one hinge is out/off track:

- Need to pull second hinge off of the Range so that oven door is completely removed.
- Lay the door face down (Note: place door on soft cloth, rug or blanket to protect the door) with hinges facing up.
- You will need to push the Top Arm (Long Arm) of the hinge down towards the Lower Arm (Short Arm) and pull the loop over the locking hook on the upper hinge. (see picture below)
- Once this has been done to **BOTH** hinges, lift the Oven Door & evenly slide (at a 45 degree angle) both hinges back into the oven receptacles.
- As the door is being re-inserted, start to open the door until it is completely open. (Note: be sure to check that the frame of the receptacles is resting in the center of the notch located on the bottom of the lower arm)
- Once the door is in place, drop the two (Brass) swivel tabs down onto the lower arm and close the oven door. (Note: You may want to open and close the oven door a couple of times to make sure that the door is in the correct position and that it is opening and closing correctly)
- If it is not opening and/or closing correctly, you may need to start over at step one.

